

INSTALLATION GUIDE - LEVER HANDLE

Lever x 2

Mounting Plate x 1



Bolt through fixing x 2

Spindle x 1



Allen Key x 1

Bolt fixing sleeve x 2

Grub Screw x 3


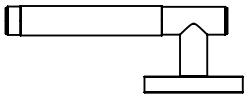


1. Line up, mark and pre drill holes
2. Screw on the bolt through fixings onto the lever side with the screw thread holes
3. Feed through the drilled holes

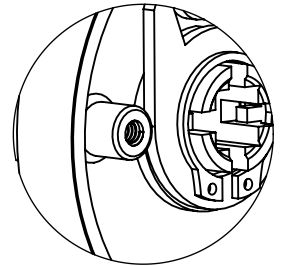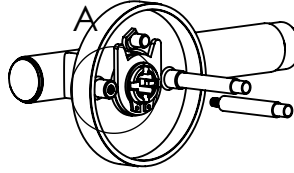


DETAIL A

4. From the other side, insert the x 2 bolt fixing sleeve through the mounting plate and screw into the bolt through fixings coming through the door
5. Insert the spindle into the designated hole and through to the lever handle

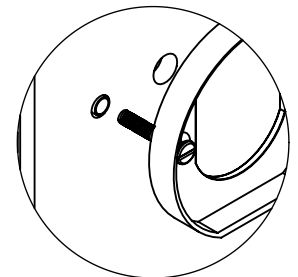
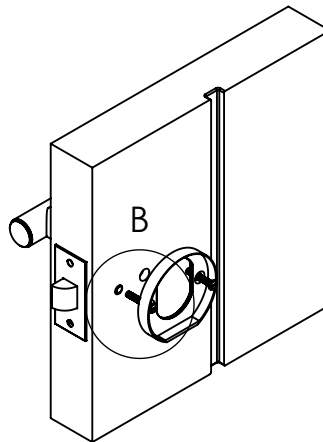


DETAIL B

6. Fix the other lever into the mounting plate

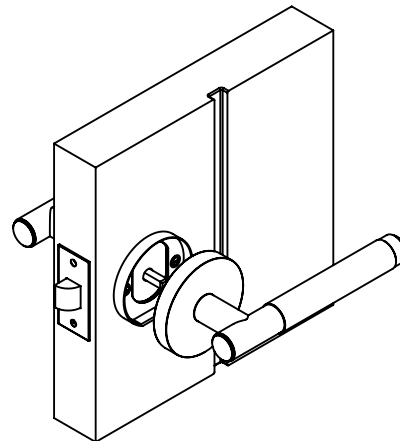

7. Secure and lock into place by tightening the grub screws using the allen key provided
8. Do this on both sides and for the spindle too

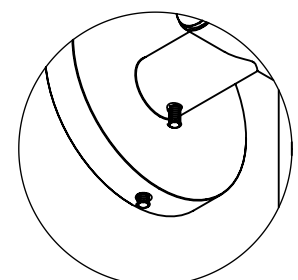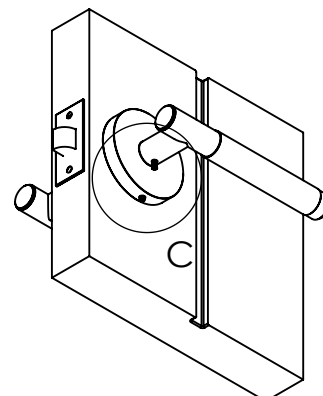

DETAIL C

PUSHKA HOME