



INSTALLATION GUIDE - MORTICE


Lever x 2




Mounting Plate x 2



Wood Screw x 4



Spindle x 1



Allen Key x 1



Bolt Through x 4



Grub Screw x 4



Bolt Cap x 4





Line up the mounting plate with your existing spindle and mark the new holes.


Horizontal - bolt through

Vertical - wood screws



1. Drill through the horizontal markings

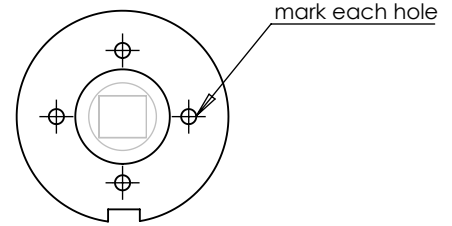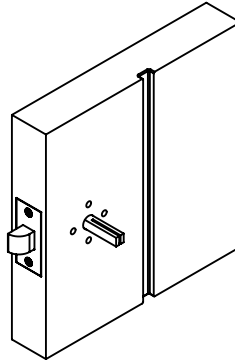

3. Line up the mounting plate with the marked holes. Feed through the bolt through fixings (Horizontal)

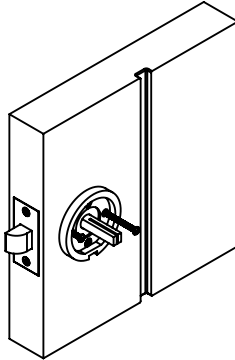


4. On the other side attach the mounting plate by screwing in the bolt caps to the bolt through (Horizontal)

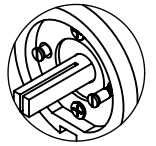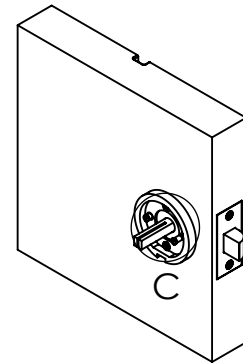


DETAIL C



5. Secure the mounting plate with the wood screws (Vertical). Do this on both sides

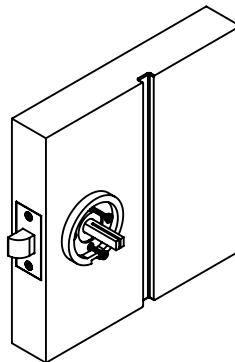

6. Attach the mortice door knob on to mounting plate

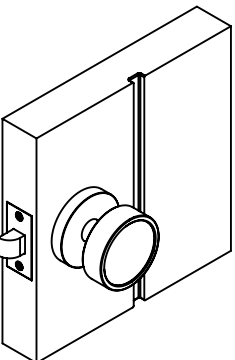

7. Tighten and secure with the grub screws using the allen key

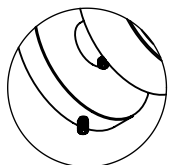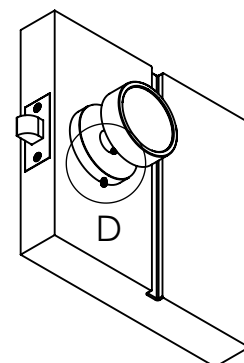

DETAIL D

8. Repeat this for the opposite side

PUSHKA HOME