



# INSTALLATION GUIDE - STAIR ROD


Bracket x 2



Rod x 1





Wood Screw x 4

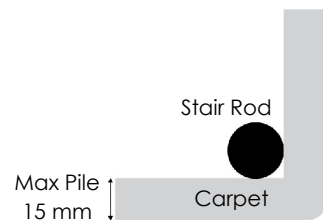

**\*NOTE the following is per rod**



1. Once your carpet runner has been laid, starting from the top of the stairs place one of the brackets in your desired position.

\* To avoid the risk of splitting the wood, mark the location of each hole and pre drill a hole before screwing in the bracket with the screws.

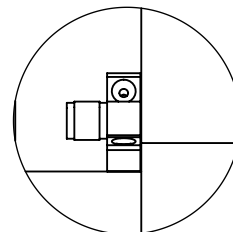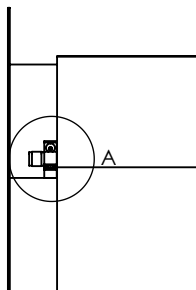

**DETAIL A**

2. Insert the wood screws into the bracket holes and fix into place

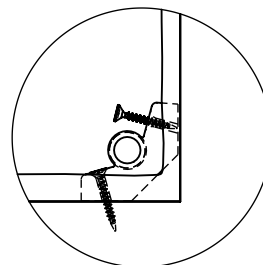
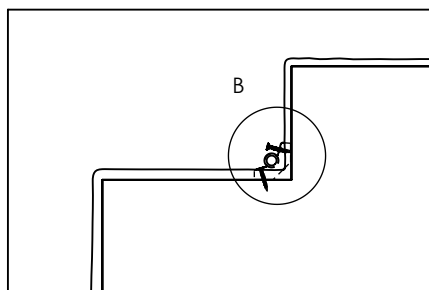


**DETAIL B**

3. Slide the rod into the hole of the bracket

4. Insert the remaining bracket to the rod on the opposite side


5. Secure in place by fixing screws into the bracket holes (same as step 2)

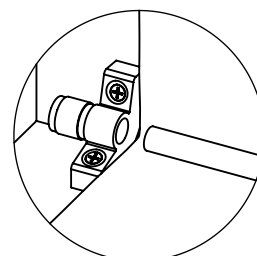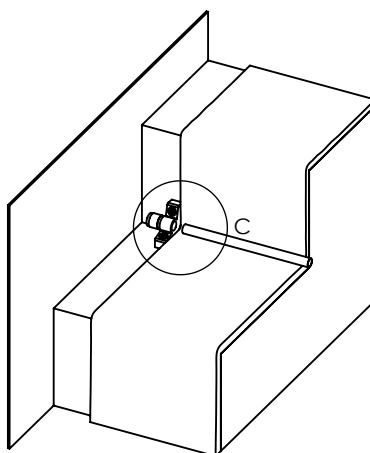

**DETAIL C**

6. Once assembled it should resemble the picture on the right

7. Repeat this process working your way down the stairs

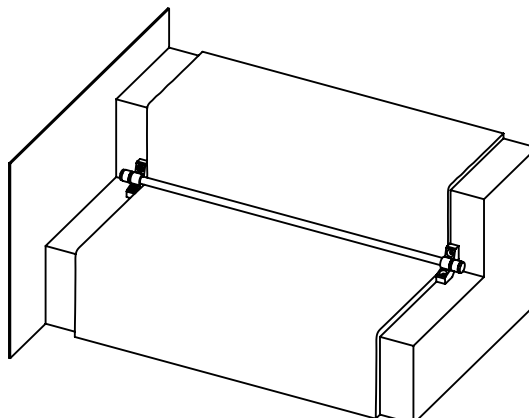

# PUSHKA HOME